


EcoStruxure Micro Data Center R-Series MDC15UR500ACI-IN


Unpacking

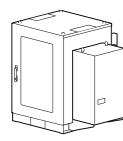


Customer support and warranty information is available at www.se.com

© 2023–2023 Schneider Electric. APC, the APC logo, and EcoStruxure are trademarks of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.


TME18108B 9/2023

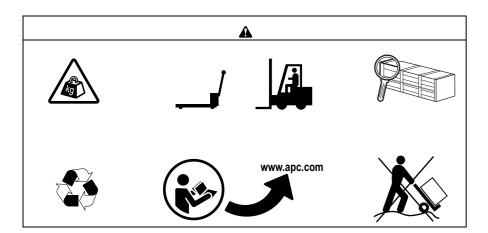

Unpacking

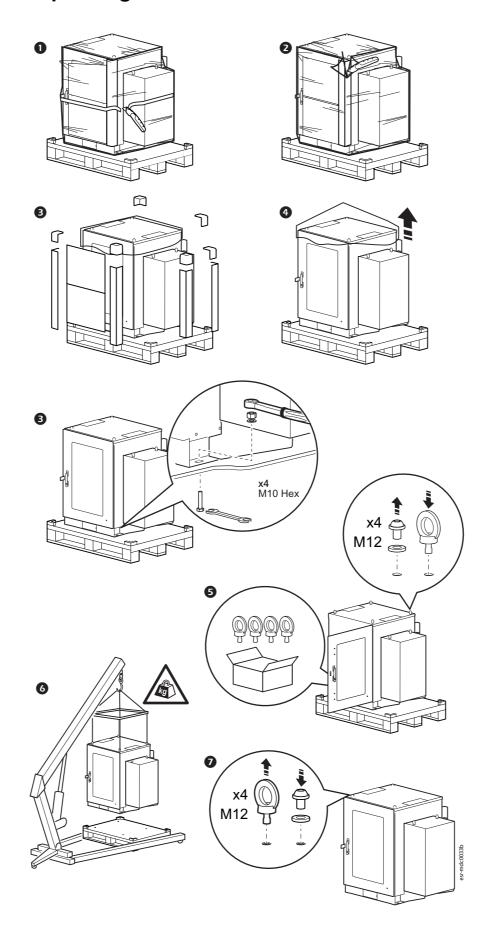

Specifications Without Packaging

 

Model	Height @	Width [©]	Depth 9	Weight
MDC15UR500ACI-IN	85 cm	85 cm	60 cm	106 kg
	(33 in)	(33 in)	(24 in)	(234 lb)

With Packaging



Model	Height @	Width @	Depth 9	Weight
MDC15UR500ACI-IN	99 cm	96 cm	72 cm	133 kg
	(39 in)	(38 in)	(28 in)	(293 lb)

Safety

Important. Save these instructions. This guide contains information for receiving, unpacking, and moving the equipment. Download the Installation and Customization Manual from the website www.se.com.

▲ WARNING

HEAVY EQUIPMENT

- Unpacking, installation, & customization to be performed by trained personnel only.

• Use at least two people to unpack and move the cabinet.

Failure to follow these instructions can result in death and injury.

Receiving

Inspect the exterior packaging. Before unpacking the shipment, verify that the labeled container matches the bill of lading.

Inspect the equipment. Once you have unpacked the equipment, carefully inspect

NOTE: In case of shipping damage such as scratches or dents contact the shipping company and then Customer Support at www.se.com.

Unpacking. The shipping materials are recyclable. Save them for later use, or dispose of them appropriately.

NOTICE

Leaving the equipment uncovered and exposed to the elements will cause damage and void the factory warranty.